

Digital Robotic Watch

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Digital Robotic Watch combines an advanced, intelligent design with hip hop function. This watch almost has a mind of its own. You can ask the watch to display which direction you should go, as well as to answer simple yes or no questions. Sometimes it operates properly, other times it refuses to respond at all! Shake the watch at your own peril — it becomes angry and refuses to display the current time! The watch's other features include:

Spherical Dot Matrix Liquid Crystal Display — gives the watch a funky futuristic look and feel.

Three Robotic Alarm Sounds — alert you at the set time with one of three different alarm sounds.

Time and Date Display — shows the current time and date.

Sound Effect — you can turn the watch's sound effects on or off.

Self Diagnosis — when left alone for several hours, the watch runs a pretend self-diagnostic test on various functions, then returns to normal operation.

USING THE CONTROLS







Time Display Button (right button) — press to display the current time, date, and day of the week, or press to select the desired setting.

Mode Button (left button) — press to access decision-making mode, direction mode, alarm setting mode, time-setting mode, or sound mode.

Three Indicators — flash automatically each time you press a button, or randomly at intermittent times.

Each time you press a button, the watch sounds a key tone.

UNDERSTANDING THE ICONS

Icon	Description
	Alarm Set Icon
	Direction Icon
	Decision Icon
	Sound On Icon
	Sound Off Icon
	Time Set Icon

SETTING THE TIME AND DATE

Notes: While setting the time and date, if you do not press a button for about 2 seconds, the display returns to standby.

1. Repeatedly press the mode button until the time set icon appears.

2. Press the time display button. The first hour digit flashes.
3. Repeatedly press the time display button until the desired hour digits appear. Press the mode button after the desired digit appears to store that digit in memory. Do the same for the minute digits.
4. After storing the current time in memory, **AM** or **PM** flashes. Repeatedly press the time display button to select either AM or PM hours. Press the mode button to store the time setting. The year appears.
5. Repeatedly press the time display button to set the desired year, month, and day settings. Press the mode button to store each setting in memory. The time set icon appears, then the display returns to standby.

To view the current time, date, and day of the week, repeatedly press the time display button.

Setting the Alarm Time

Note: While setting the alarm, if you do not press a button for about 2 seconds, the display returns to standby.

1. Repeatedly press the mode button until the alarm set icon appears. Then press the time display button. The first hour digit flashes.
2. Repeatedly press the time display button to set the desired hour and minute digits.

Press the mode button after the desired digit appears to store that digit in memory.
3. After storing the current alarm time in memory, **AM** or **PM** flashes. Repeatedly press the time display button to select either AM or PM hours. Press the mode button to store the desired time setting in memory.
4. Repeatedly press the time display button to select the desired alarm sound or to turn off the alarm.
5. Press the mode button to store the setting in memory.

When the watch reaches the set alarm time, the alarm sounds for a few seconds (depending on the selected alarm sound).

Note: The alarm sounds at the set time, even if you turn off the sound effects.

TURNING THE SOUND ON/OFF

To turn the watch's sound effects on or off, repeatedly press the mode button until a sound icon appears (sound on or sound off). Repeatedly press the time display button so the desired sound icon appears.

Even when sound effects are turned off, the key tone and alarm sound.

USING THE DECISION MAKER

Your watch can help you answer yes or no questions (using X for no and O for yes) in one of three ways:

- slot machine (Xs and Os scroll down the display, stopping on a letter for your answer)
- checker (Xs and Os fill the display in a checkered pattern — whichever letter appears the most is your answer)
- icon war (Xs and Os fill the display — whichever letter appears the most is your answer)

Repeatedly press the mode button so the decision icon appears. Then press the time display button. Ask the watch your question. After thinking about it, the watch displays the answer for you.

The watch can also help you decide which direction you should go. Repeatedly press the mode button until the direction icon appears, then press the time display button. Ask the watch which way you should go. After thinking about it, the watch displays an arrow, pointing which direction you should go.

MISCHIEVOUS EFFECT

Your watch seems to have a mind of its own, sometimes playing tricks on you. When your watch is being mischievous, the display shakes or distorts so that you cannot clearly see the current time. To stop the mischievous effect, simply shake your watch or press any button. The display returns to standby.

Note: If you do not stop the mischievous effect in time, the watch returns to standby, but remains mischievous. You must press the time display button to clear the effect.

You can manually activate the mischievous effect at any time. Press time display button so the current time appears, then press both the time display and the mode buttons simultaneously. To clear the mischievous effect, either shake the watch or press any button.

Self Diagnosis

Your watch pretends to run a self-diagnostic test and can fix "errors." Sometimes **ERROR** appears if you repeatedly enter the mischievous mode, if you pick up the watch after it has been placed on a stable surface for about six hours (for example, overnight), or if you repeatedly press the time display button. You cannot enter any of the other modes until the watch finishes its self-diagnosis (about 3 seconds).

REPLACING THE BATTERY

Your watch comes with one 3V lithium CR2032 battery installed for power. When the watch slows down, the display dims, the sound becomes weak or distorted, or the watch stops operating properly, replace the battery. For the best performance and longest life, we recommend RadioShack batteries.

Warnings:

- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of an old battery promptly and properly. Do not burn or bury it.

Caution: Use only a fresh battery of the required size and recommended type.

Follow these steps to replace the battery.

1. Use a Phillips screwdriver to remove the four screws on the back of the watch's case, then remove the battery compartment cover.
2. Use the screwdriver to remove the screw on the battery contact plate.
3. Remove the old battery and install a new one with the positive (+) size facing up.
4. Replace the battery contact plate and secure it with its screw.
5. Hold the watch with the buckle at the top and the display facing down, then replace the back of the battery compartment cover, making sure the logo faces out. Secure the battery compartment cover with its screws.

Note: If you replace the case back incorrectly, the watch will not work properly.

Caution: If you do not plan to use the watch for a month or longer, remove the battery. Batteries can leak chemicals that can destroy electronic parts.

CARE

To enjoy your RadioShack Digital Robotic Watch for a long time:

Keep the watch dry. If it gets wet, wipe it dry immediately. Use and store the watch only in normal temperature environments. Handle the watch gently and carefully. Do not drop it. Keep the watch away from dust and dirt. Wipe the watch with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the watch's internal components can cause a malfunction and might invalidate its warranty. If your watch is not performing as it should, take it to your local RadioShack store for assistance.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99